

ASSEMBLY INSTRUCTION  
NEW ORDER

VERTICAL SHELF / SHELVES

A x 1



B x 3



C x 1



D x 16



E x 32




F x 1





1

Level the bottom shelf C with F before assembly.

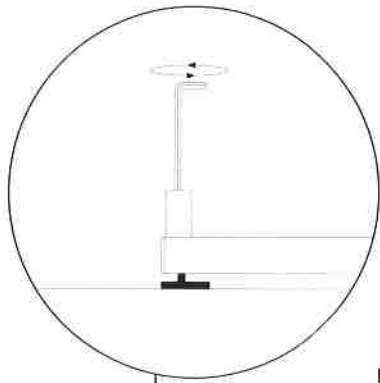


2

Put all the parts together

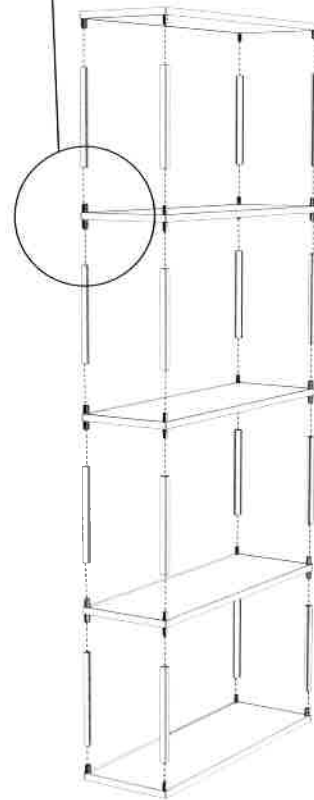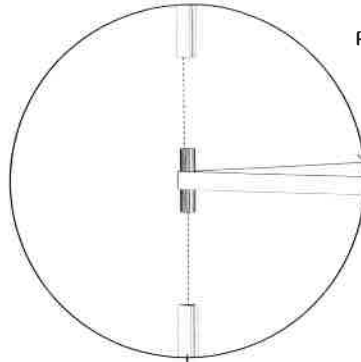

3

Place E in the holes in the profile D and tighten with F

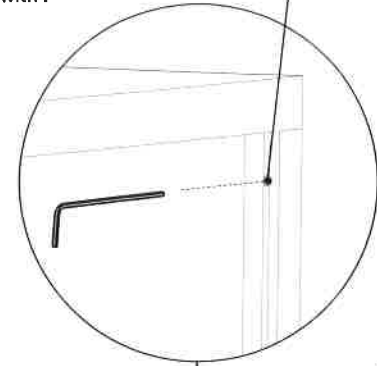

NOTE: The set screw E is already placed in the profile D

4

